



User Manual

TDC-5502C

5M PIXEL DIGITAL CAMERA

CONTENTS

I. GETTING TO KNOW YOUR CAMERA2

1.CONFIGURATION & INSTALLATION..... 2

2. MONITOR SCREEN DISPLAY..... 3

3. PREPARATION BEFORE CAPTURE 3

4. SHOOTING..... 4

5. VIDEO & AUDIO RECORDING:..... 9

6. AUDIO INPUT & OUTPUT.....11

7. IMAGE REVIEW..... 12

8. OTHER SETTINGS..... 17

II. SOFTWARE & DOWNLOAD.....22

1. PC-CAM DRIVER INSTALLATION 22

III. MAINTENANCE24

1. CAMERA..... 24

2. BATTERY 25

 
3. MEMORY CARD 27

4. SECURITY 29

IV. LIMITED WARRANTY:32
V. FCC.....	43


I Getting to know your camera

1. Configuration & installation

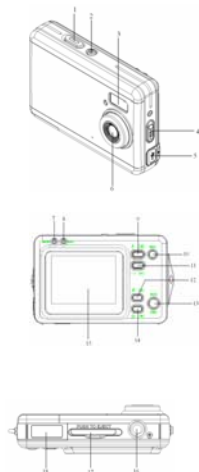

1	SHOOT/OK button
2	POWER button
3	Flash light
4	MACRO button
5	USB jack
6	Lens
7	MACRO light
8	BUSY light
9	◀ LEFT/flash
10	MENU button
11	▶ RIGHT/DISP
12	▲ UP
13	MODE button
14	▼ DOWN
15	TFT monitor screen
16	Tripod socket
17	SD card slot
18	Battery cover

 2. Monitor screen display

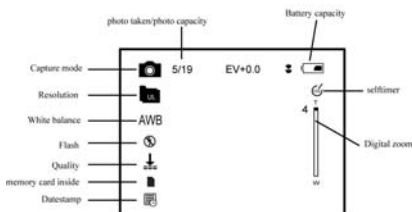

3. Preparation before capture

3.1 Battery

It's optional to use AAA alkaline batteries or rechargeable batteries.

 
Open the battery cover and load the batteries according to the polarity indicated on the battery door.

3.2 Insert the memory card

Insert the memory card to the card slot carefully. Check the right direction before

insert the memory card.

Attention: If you can not insert the SD card, take it out and insert again.



4. Shooting

- 1): Move the slide cover to display the lens;
- 2): Press POWER button to enter default capture mode;
- 3): Press the shutter button to take pictures.



Note:



- Do not take the memory card or battery out when camera is saving the image, otherwise, the image won't be saved completely.
- The screen will power off automatically if the camera is not in working status for 30 minutes. Press any key to restart the screen.

In capture mode, press “MENU” to enter main menu for 2 options: “Image” mode and “Setup” mode:

Select “Image”, the following settings are: Resolution, Quality, White Balance, Color Effect, Exposure, Date Stamp, Self timer, and Burst Snapshot



A. Resolution:



- a) Press the DOWN button  to select “resolution” mode, then press RIGHT button  for 5 options : 2592*1944, 2048*1536 , 1600*1200 , 1280*960 , 640*480;

Press the UP/DOWN button   to select the resolution;

- c) Double press “MENU” to confirm and exit.





B. Quality:

- a) Press the DOWN button  to select “Quality” and press the RIGHT button  for 3 options: “Super”, “Fine”, “ Normal”.





b) Press the UP/DOWN button   to select the image quality.

- c) Double press “MENU” to confirm and exit.





C. White Balance:

- a) Press the DOWN button  to select “White Balance”, press the RIGHT button  for 5 options: Auto, Day Light, Tungsten, Fluorescent and Cloudy;
- b) Press the UP/DOWN button   to select the proper mode;
- c) Double press “MENU” to confirm and exit.

D. Color Effect:

- a) Press the DOWN button  to select “Color Effect”, press the RIGHT button  for 3 options: “Color”, “Sepia”, “Monochrome”.;
- b) Press the UP/DOWN button   to select the color you desired;
- c) Double press “MENU” to confirm and exit.




E. Exposure:

- a) Press the DOWN button  to select “Exposure”, press the RIGHT button  ;
- b) Press the LEFT/RIGHT button   to

adjust the exposure from -2.0 to +2.0; then press “MENU” to confirm and exit.

F: Date Stamp:




The date will be showed at the lower right corner of the image when viewing the image



a) Press the UP/DOWN button   to select “Date Stamp”, press the RIGHT button ;

b) Press the UP/DOWN button   to select “Enable” or “Disable”;

c) Double press “MENU” to confirm and exit.

G: Self timer:






a) Press the UP/DOWN button   to select “Self timer”, press the RIGHT button  to select: “Disable”, “10SEC”, “20SEC”;

b) Press the UP/DOWN button   to select the time you desired;




c) Double press “MENU” to confirm and exit.


Note: set “Disable” if you want to cancel the self timer..

H: Burst Snapshot:

- a) Press the UP/DOWN button   to select “Burst Snapshot”, press the RIGHT button 
- b) Press the UP/DOWN button   to select “Single” or “Burst”;
- c) Double press “MENU” to confirm and exit.

Flashlight

	Auto: Automatically turn on/off according to the light
	Flash on: Force on the flash
	Flash off: Force off the flash

In capture mode, press the LEFT button  to enter above three modes in cycle.



- Flash will be charged automatically between shooting and the screen turn into black when charging. The next image can be shot only the charge is completed.
- If shooting with flash under a bright environment, the facular in the image will cause the incorrect exposure.

Note: The flash does not work in “Burst snapshot” mode.


Digital zoom

To view the zoom effected by LCD.

Note: digital zoom may affect the quality of image. The higher digital zoom multiples, the lower of the image quality, maximum 4X digital zoom available.

In the camera/video mode, press the UP/DOWN button   to select digital zoom;

5. Video & audio recording:

1): Press “MODE” till the icon ”  “appears on the upper left of screen;




2): Press shutter to start recording;

3): Press shutter again to stop recording the video.

4): In the video mode press “MENU” to enter the main menu for 2 options: “video” and “setup”.

5): There are 4 Options available for “video” mode: “ Resolution”, “Frame rate”, “White balance” and “Audio”.




A: Video Resolution:



a) Press the UP/DOWN button   to select “Resolution”, press the RIGHT button  for 2 options: 640*480 or 320*240;

b) Press the UP/DOWN button   to select resolution.

c) Double press “MENU” to confirm and exit.

B: Frame rate:

a) Press the UP/DOWN button   to select "Frame rate", press the RIGHT button  for 2 options: 30 fps or 15 fps;




b) Press the UP/DOWN button   to select the frame rate you desired;

c) Double Press "MENU" to confirm and exit.

C: White balance

Same as the setting under the capture mode (See page 4).

D: Audio Recording: .


a) Press "MENU" under video mode, press the UP/DOWN button   to select "Audio", press the RIGHT button  to select "Enable" or "Disable";

b) The video with voice recorded when select "Enable" the video without voice recorded when select "Disable";

c) Double press "MENU" to confirm and exit.

6. Audio input & output

6.1 Audio input





- a): Power on;
- b): Press “MODE” to select Audio record Mode ()
- c): Press shutter to start recording, the time of recording will display on the screen;
- d): Press shutter again to stop record.

6.2 Audio playback

Please note that this camera do not support the speaker; the volume is only available when connecting with TV or PC to playback

7. Image review

7.1 Still image review



- a): Press “MODE” to playback mode.
- b): Press the LEFT/RIGHT button   to review the images.
- c): Press the LEFT/RIGHT button   to show previous or next image or video file.

7.2 Play video

a): Power on and press “MODE” to playback mode.

b): Press the LEFT/RIGHT button   to select video files;

c): Press shutter to play video file and press shutter again to end playing;



d): Press LEFT/RIGHT button   to show previous or next image or video file.

7.3 Play video file on TV

You can play video file on TV by connecting the cable:

a): Power on and connect the camera and TV by the AV cable;

b): Power on TV and switch to AV mode;

c): Press LEFT/RIGHT button   to select to play, FF or SP to watch video file.

Note:

- The camera screen will automatically

power off when the cable connected to the camera;

- The battery will also be used when the camera connected to TV;
- The TV system may affect the image quality, please adjust the system of the camera complied with the TV system(see P.15 for TV output setting)
- Please adjust the TV setting if the image does not display at the center of TV screen; this is not the failure of the camera.



Note: *Please use the cable attached to connect with the camera and TV.*

7.4: Image review setup:






Under image playback mode, press “MENU” to enter the main menu for 2 options: “play” and “Setup”.

There are 8 Options in “play” mode: Delete Current, Delete All, lock, thumbnail, set logo, rotate, slideshow and set DPOF.

7.4.1. Delete image




- a) Press the UP/DOWN button   to select delete current or delete all.
- b) Select “Delete Current” to delete current the image. Press RIGHT button to confirm and exit.
- c) Select “Delete All” to delete all the images. Press RIGHT button to confirm and exit.

7.4.2: Lock image





- a) Press the UP/DOWN button   to select “lock”, press the RIGHT button  to select “lock current”, “lock all”, “unlock current”, “unlock all”;
- b) Press the UP/DOWN button   to select the necessary operation;
- c) Double press “MENU” to confirm and exit.

Note: *The locked image cannot be deleted.*






7.4.3: Thumbnail

a) Press “MENU” button in image playback mode, then press UP/DOWN button   to select “thumbnail”, press the RIGHT button  to enter thumbnail mode;




b) Press “MENU” key to delete the selected image.

c) Press the LEFT/RIGHT/UP/DOWN button     to select image and press shutter to restore the original size.

7.4.4: Rotate

Press “mode” button in image playback mode, then press UP/DOWN button   to select “Rotate”, press the RIGHT button  to enter rotate mode: 90°, 180° and 270°, press UP/DOWN button   to select the rotate degree you are needed, then press “Menu” to confirm and exit.

7.4.5: Slideshow:

Press the UP/DOWN button   to select “slide show” and press the RIGHT button  to set slideshow;






Press shutter to return the normal playback mode.

8. Other settings

A: Language (Abc):



a) Power on and press “MENU” to enter “Image” and “Setup”;


b) Press RIGHT button  to select “Setup”;



c) Press the UP/DOWN button   to select “Language(Abc), then press the right button  to enter “Language (Abc)”, press the UP/DOWN button   to select needed language; then double press “MENU” to confirm and exit.

B: Auto Power Off

a) Power on and press “MENU” to enter “Setup”;



b) Press the UP/DOWN button   to enter “Auto Power Off”;


c) Press the RIGHT button  to select “Disable”, “60Sec”, “120Sec”;



d) Press the UP/DOWN button   to select power off time, and then double press “MENU” to confirm and exit

C: TV Output

a) Power on and press “MENU” to enter “Setup”;




b) Press the UP/DOWN button   to enter “TV Output”;



c) Press the RIGHT button  to show “NTSC, PAL”;

d) Press the UP/DOWN button   to select the proper TV mode; then press “MENU” to confirm.

d) Press “MENU” again to exit.

D: Play Logo

a) Press the UP/DOWN button   to select “Play Logo”, press the RIGHT button  to select “Enable” or “Disable”;



b) Press the UP/DOWN button   to select the operation you are needed; then


double press “MENU” to confirm and exit.

Note: No startup screen displayed when you select “Disable”

E: Light Frequency

a) Power on and press “MENU” to select “Setup”;




b) Press the UP/DOWN button   select “Light Frequency”;

c) Press the RIGHT button  to select: 50Hz or 60Hz then double press “MENU” to confirm and exit.

F: Date/Time

This camera can record the shooting date and time base on the Date/Time function.

a) Power on and press “MENU” to enter “Setup”;



b) Press the UP/DOWN button   to enter “Date/Time”; then press the RIGHT button  to enter

c) Press the UP/DOWN button   to set date/time;

d) Repeat the operation to change the date and time and then double press “MENU” to confirm and exit.

G: Buzzer


a) Power on and press “MENU” to select “Setup”;

b) Press the UP/DOWN button   select “Buzzer”; and then press “MENU” to confirm and exit.

H. Format




a) Power on and press “MENU” to select “Setup”;

b) Press the UP/DOWN button   select “Format”;

c) Press the RIGHT button ; select “Yes” to format the camera memory or SD card.

d) Double press “MENU” to confirm and exit.

I. Default setting



- a) Power on and press “MENU” to select “Setup”;
- b) Press the UP/DOWN button   select “Default setting”;
- c) Press the RIGHT button  to select: “load” or “NO”, select “load” to back to default setting.
- d) Double press “MENU” to confirm and exit.

J. USB Mode



Select “PC Camera” model when you use this camera as a PC camera.

Select “Mass Storage” when you download, delete or upload file, it can also be used as the removable disk.

Mode switch:



- a) Power on and press “MENU” to enter “Setup”;
- b) Press the UP/DOWN button   to


select “USB Mode”;

c) Press the LEFT/RIGHT button   to select “mass storage” or “PC camera” ; then double press “MENU” to confirm and exit.

K. Firmware version

a) Power on and press “MENU” to enter “Setup”;

b) Press the UP/DOWN button   to select “Firmware version”;

c) Press the RIGHT button  to enter, it will display the firmware version and update date.

d) Press “MENU” again to exit.


II. Software & download

1. PC-CAM driver installation

Insert the CD into the CD-ROM of your PC, An interface appears as follows, Click the “Install Camera Driver” to install the camera driver.



2. How to use PC-CAM function

1. Power on the camera, Press “mode” button to Select “PC camera”
2. Double click the icon “my computer” on the desktop of PC
3. Double click the icon “ ” Then you can start to use the pc-cam function

3. Image download

Set the USB mode to “mass storage”, and

then the camera becomes a removable storage device:

a): Connect the USB cable with PC and the camera;

b): Double click the icon “my computer” on the desktop of PC;

c): Double click “” icon

d): Double click “DCIM” file folder;

e): Copy all the files to your PC.

Note: *do not take out the SD card or the batteries when you copy the files to PC, otherwise the files might be destroyed or lost.*

III. Maintenance

Always keep your camera and accessories in proper condition.

1. Camera

Use dry, soft and clean clothes to wipe out the fingerprint and the dust on the lens and LCD.

Do not use rough cloths or abrasive of laundry

to avoid the surface scrape of the camera.

 
Do not put the camera in the sun or under the high-temperature environment (such as high temperature tool bag, trolley case and so on).

Wait few minutes before use when you bring the camera from a low temperature environment to a warm environment.

2. Battery

Energy management

The energy status of the power can be displayed on LCD as below:

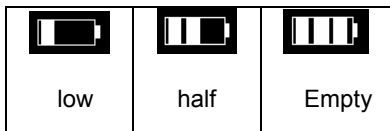

The factors influence the lifetime of the battery:

- ☐ The used frequency and time of LCD;
- ☐ The used frequency of flashlight;

- Quantity of image shooting
- Temperature (it will shorten the lifetime of the battery when the camera is used in low temperature environment).

Note:

- Manganese battery is not allowed for this camera;
- Don't take out the battery when power on, otherwise it will affect the internal settings and functions of the camera;
- The following situation will affect the lifetime of the battery:
 - LCD turn on;
 - LCD in playback status for a long time.

Please replace new battery when battery low, and follow the battery instruction on when using.

Please take out the battery if you won't use the camera for a long time.

Don't insert the leakage, eroded or inflated battery into the camera.

Note: if you use rechargeable battery, please full charge the battery before using the battery.

3. Memory card



The format is necessary in the following situations:

- a): Unformatted SD card;
- b): Repeat format card when it do not working in camera properly although it has been formatted before;
- c): It is important to format the card first when it will be used in another camera.

Note: *please confirm the card keep “unlock” status before insert the card into camera. All data will be deleted and unable to recover when the card is formatted, please backup the data before formatting.*

Memory card format

- a. Confirm the card status in “unlock” mode;

- b. Insert the card before power on;
- c. Press “MENU”; enter “setup”:
- d. Press the UP/DOWN button   to enter “format”;
- e. Select “yes” to start format;
- f. Double press “MENU” to exit.

Note: *do not pull out the card or take out the battery to avoid any failure of the card.*



The card available to this camera:

- Standard SD card (8 MB –2GB)
- 3V (3.3V) card (8 MB –2GB)
- 5V card is not available
- The camera may be unable to recognize the non-standard card or formatted by another device (such as another camera). Please format the card in this camera before use.

4. Security

To avoid the danger of electric shock, do not open the camera or fix the camera by yourself.

Keep the camera in dry condition, the humidity may cause the failure of the camera.

Stop use the camera immediately if the camera affected with damp. It is necessary to dry the camera in the air before reuse the camera.

IV. Specifications & system requirement:

1 . Specifications of the camera

sensor	5 Mega pixels CMOS
Image resolution	2592 x 1944, 2048 x 1536, 1600 x 1200, 1280 x 960, 640x 480
storage	Internal_Flash Memory 32MB SDRAM, External SD card (8MB to 2GB)

File format	JPEG, EXIF 2.2, DCF1.1, MJPEG(AVI)
Capture	Single/Burst
Video	VGA 640x480 ,QVGA 320X240
snapshot speed	Electronic shutter: 1/2 ~ 1/2000 sec
Self timer	10 sec / 20 sec
zoom	4 x digital zoom
White balance	Auto 、 Daylight 、 Tungsten 、 Fluorescent, Cloudy
exposure	Auto
flash mode	flash off , flash on, flash Auto
illumination	Auto
PC-Camer	640 x 480
interface	USB1.1
TV output	NTSC / PAL

TFT	2.0" TFT LCD monitor screen
power	2 AAA alkaline batteries、 rechargeable batteries
OSD language	English/French/German/Spanish/T C/Italian/Portuguese
focal range	f=8.25mm
aperture	F=3.0
Auto	60sec / 120sec
System	WIN98SE / 2000 / ME / XP / Vista
Weight	Approx. 85g(3.0oz)(without batteries and SD card)
Dimension s	Approx. 85 x 56 x 22mm (3.3 x 2.2 x 0.86 in)

Note: The product design and the specifications are subject to change without prior notice.

2. System required:

Windows 98SE / 2000 / ME / XP / Vista

CPU: Pentium III 800MHz and upper

Memory: 64 MB and upper memory

Disk space: At least 128 MB space free

IV. Limited Warranty:

This form describes the protection you will have under this Limited Warranty.

LIMITED WARRANTY PERIOD:

This Limited Warranty begins on the date of purchase of the Covered Product and continues for a period of six months.

WHAT IS COVERED

Meijer will pay the cost of labor and repair or replacement parts in the event Your Covered Product fails to operate as a result of a mechanical or electrical failure caused by defects in workmanship and/or materials. A mechanical or electrical failure caused by a direct result of a power surge is also covered. Parts will be replaced with those of like kind

and quality, and may be new or remanufactured. If the Covered Product cannot be repaired, if the cost of the repair exceeds the original purchase price of if parts are not available due to the age of the Covered Product of discontinued by the manufacturer, the Covered Product will be replaced with a product of similar features.

NOT INCLUDE ANY CANADIAN

Coverage under this Limited Warranty is limited to the United States of America, including the District of Columbia. It does not include any include any Canadian or U.S. Territories including Guam, Puerto Rico, of U.S. Virgin Islands.

WHAT IS NOT COVERED

- PRODUCTS NOT ORIGINALLY COVERED BY A MANUFACTURER'S WARRANTY;
- ITEMS THAT ARE STILL COVERED BY

THE MANUFACTURER'S WARRANTY,
REGARDLESS OF WHETHER THE
MANUFACTURER HONORS SUCH
WARRANTY;

- PERIODIC CHECKUPS AND/OR
PREVENTIVE MAINTENANCE AS
DIRECTED BY THE MANUFACTURE
EXCEPT AS PROVIDED HEREIN;
- INHERENT PRODUCT DEFECTS THAT
ARE THE RESPONSIBILITY OF THE
MANUFACTURER OR PARTS FAILURE
DUE TO A MANUFACTURER'S RECALL;
- ANY AND ALL PRE-EXISTING
CONDITIONS THAT OCCUR PRIOR TO
THE EFFECTIVE DATE OF THIS LIMITED
WARRANTY AND/OR ANY COSTS TO
REPAIR ANY PRODUCT SOLD "AS-IS"
INCLUDING BUT NOT LIMITED TO FLOOR
MODELS, DEMONSTRATION MODELS,
ETC.;

- PARTS OR REPAIRS DUE TO NORMAL WEAR AND TEAR AND ITEMS NORMALLY DESIGNED TO BE PERIODICALLY REPLACED BY THE PURCHASER DURING THE COVERED PRODUCT'S LIFE, INCLUDING BUT NOT LIMITED TO BATTERIES, LIGHT BULBS, ETC.;
- DAMAGE FROM ACCIDENT, ABUSE, MISUSE, MISHANDLING, INTERODUCTION OF FOREIGN OBJECTS INTO THE COVERED PRODUCT, UNAUTHORIZED MODIFICATIONS OR ALTERATIONS TO A COVERED PRODUCT, FAILURE TO FOLLOW THE MANUFACTURER'S INSTRUCTIONS, AND EXTERNAL CAUSES INCLUDING THIRD PARTY ACTIONS, FIRE, THEFT, INSECTS, ANIMALS, EXPOSURE TO WEATHER CONDITIONS, WINDSTORM, SAND, DITR, HAIL, EARTHQUAKE, FLOOD, WATER,

ACTS OF GOD OR CONSEQUENTIAL
LOSS OF ANY NATURE;

- LOSS OR DAMAGE CAUSED BY WAR, INVASION OR ACT OF FOREIGN ENEMY, HOSTILITIES, CIVIL WAR, REBELLION, RIOT, STRIKE, LABOR DISTURBANCE, LOCKOUT, OR CIVIL COMMOTION;
- INCIDENTAL, CONSEQUENTIAL OR SECONDARY DAMAGES OR DELAY IN RENDERING SERVICE UNDER THIS LIMITED WARRANTY, OR LOSS OF USE DURING THE PERIOD THAT THE COVERED PRODUCT IS AT AN AUTHORIZED SERVICE CENTER OR OTHERWISE AWAITING PARTS;
- ANY PRODUCT USED IN A COMMERCIAL SETTING OR RENTAL BASIS;
- FAILURES THAT OCCUR OUT SIDE OF THE 50 STATES OF THE UNITED STATES OF AMERICA, INCLUDING THE DISTRICT

OF COLUMBIA;

- NONFUNCTIONAL OR AESTHETIC PARTS INCLUDING BUT NOT LIMITED TO PLASTIC PARTS, KNOBS, ROLLERS, BASKETS, SCRATCHES, PEELING AND DENTS;
- UNAUTHORIZED REPAIRS AN/OR PARTS;
- COST OF INSTALLATION, SET-UP, DIAGNOSTIC CHARGES, REMOVAL OR REINSTALLATION OF THE COVERED PRODUCT, EXCEPT AS PROVIDED HEREIN;
- ACCESSORIES USED IN CONJUNCTION WITH A COVERED PRODUCT;
- ANY LOSS OTHER THAN A COVERED BREAKDOWN OF THE COVERED PRODUCT;
- SERVICE WHERE NO PROBLEM CAN BE FOUND;
- BREAKDOWNS WHICH ARE NOT

REPORTED WITHIN THE TERM OF THIS LIMITED WARRANTY;

- IMPROPER INSTALLATION OF COMPONENTS OR PERIPHERALS;
- CORRUPTION OF ANY RECORDING MEDIA, INCLUDING ANY PROGRAM, DATA OR SETUP INFORMATION RESIDENT ON ANY HARD DRIVES AND INTERNAL OR EXTERNAL REMOVABLE STORAGE DEVICES, AS A RESULT OF THE MALFUNCTIONING OR DAMAGE OF AN OPERATION PART, OR AS A RESULT OF ANY REPAIRS OR REPLACEMENT UNDER THIS LIMITED WARRANTY;
- DAMAGE TO CLOTHING;
- COLOR FADING OF PICTURE FOR ANY TELEVISION;
- BURNED-IN PHOSPHOR (INCLUDING IMAGE GHOSTING), PIXEL BURNOUT NOT IN ACCORDANCE WITH THE

MANUFACTURER'S SPECIFICATIONS.

WHAT TO DO WHEN YOUR PRODUCT FAILS TO OPERATE:

- Call the 24-hour customer service toll-free number at (866) 845-9634.

Many oversights, which are not covered under this Limited Warranty, can be due to simple circumstances such as the Covered Product not being switched on, being unplugged, or a fuse blown at the junction box. For a Covered Product that uses batteries as the primary power supply, or a remote control unit, please check that the batteries do not need replacing or recharging.

SERVICE DELIVERABLES:

There is no deductible required to obtain service for Your Covered Product.

OTHER PROVISIONS:

Limited of Liability:

The limit of liability under this Limited Warranty is the least of the cost of (1) the purchase price of the Covered Product excluding tax and delivery costs or (2) authorized repairs not to exceed the purchase price of the Covered Product or (3) replacement of the Covered Product with similar features or (4) reimbursement for authorized repairs or replacement. Upon replacement, there is no longer any obligation for the replaced product under this Limited Warranty.

Limitations of Implied Warranty:

All Implied Warranties which may arise under

state law, including all Implied Warranties of Merchantability or Fitness for a particular purpose, are limited to the duration of this Warranty and do not cover incidental or consequential damages. Some states do not allow limitations on how long an Implied Warranty last or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Transferability and Renewals:

This Limited Warranty is not transferable or renewable.

Subrogation:

If we pay for a loss, we may require you to assign your rights of recovery against others.

We will not pay for a loss if you impair these rights to recover. Your rights to recover from others may not be waived.

Arbitration:

In the event of a disagreement between you and us concerning costs, either of us may make a written demand for arbitration. This must be done within sixty (60) days the say you filed your claim. Each of us will select an arbitrator. The two arbitrators will select an umpire. Each of us will pay the expenses of the arbitrator we select. The expenses of the umpire will be shared equally. Unless both of us agree otherwise, arbitration will take place in the county and state in which you live. Local rules apply. A majority decision will be binding.

FCC part 15.19

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC part 15.21

Warning: Changes or modifications to this unit not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

FCC part 15.105

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15

of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help

GFM guarantee

If you are not totally satisfied with this GFM product, you may return it to any Meijer store for a full refund within 6 months (180days) of purchase when accompanied by a receipt.

For customer support please call (866) 845-9436 or go to www.gfmproducts.com

Dist. by Wholesale Merchandisers, Inc.,
2929 Walker, NW,
Grand Rapids, MI 49544
Made in China